



Safety Cap for CF Viewports

Standard Version with 6 mm Lead Glass for X-ray Shielding

- Available for all CF viewports (DN16CF DN160CF)
- Eliminates primary & secondary ionizing radiation
- due to exact fit of the safety cap
- Available in stainless steel 304 and 316L
- Easy assembly & removal



Mounting Principle / Technical Details




Mounting via 3 sochket set screws on the viewport

Lead glass field exchangeable

Material thickness: stainless steem at least 3 mm, lead glass 6 mm

Note: The viewport has to be mounted with socket head cap screws

Absorption Characteristics

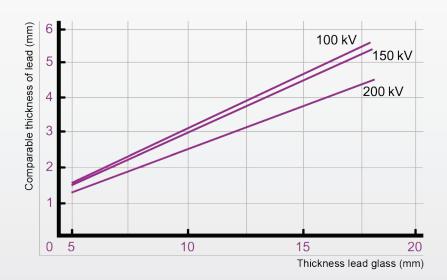

Order Information

Order code	For viewport diameter	Material
LGH-16-316	DN16CF	Stainless steel 316L
LGH-40-316	DN40CF	Stainless steel 316L
LGH-63-316	DN63CF	Stainless steel 316L
LGH-100-304	DN100CF	Stainless steel 304
LGH-160-304	DN160CF	Stainless steel 304

^{*} Please contact us for customised solutions!

